

## **WATER FLOSSER**

Model: SK-CYQ-D

---

### **CONTENTS**

1. Important Safeguards
  2. Product Description
  3. Getting Started
  4. Cleaning and Maintenance
  5. Warranty Card
- 

**Please read all instructions before using**

---

### **1. Important Safeguards**

To reduce the risk of burns, electrocution, fire, or injury to persons:

#### **Warning**

- Power adapter: DC 5V – 1A/2A.  
Do not connect this device to a voltage system different from the one specified on the device or charger.
- Do not use this product if it has a damaged cord or plug, is not functioning properly, or has been dropped or damaged.
- Keep this product away from fire and hot surfaces.
- Do not place or drop the charger in water or any other liquid. Do not handle the charger with wet hands.
- Unplug the power adapter and charging cable before use.
- Inspect the charger cord for damage before first use and regularly during the product's lifetime.

- Close supervision is required when used by or near children under 6 years of age or individuals with disabilities.
- Do not use if you have open wounds in your mouth or on your tongue.
- Do not spray water under the tongue, into ears, nose, or other sensitive areas. High water pressure may cause serious injury.

**Note:**

- Use only as directed by your dental professional.
- Do not use the product without the nozzle properly installed.
- Do not insert foreign objects into any product opening.
- Mouthwash can be used with this device. Do not add iodine, bleach, or insoluble substances to the water tank.
- Ensure the nozzle is near your teeth before switching on.
- Disassembling the product voids the warranty. For repairs, contact customer service.
- Do not operate the device without water in the reservoir.
- Unplug the charger after the battery is fully charged.
- Use this product only for oral hygiene purposes.
- If storing the device for over six months, ensure it is fully charged beforehand.
- The device remains waterproof even without the dust plug.
- Dispose of the unit according to local recycling regulations once the battery reaches end of life.

---

## **2. Product Description**

### **Components:**

- Nozzle Key
- Nozzle

- Dust Plug / Type-C Interface
- Power Button
- Mode Button
- Mode Indicator Light
- Operation Indicator Light
- Water Tank
- Water Inlet / Nozzle Storage Compartment

**Nozzle Types (some may not be included):**

- Classic Jet Tip – General Cleaning
- Plaque Seeker Tip – For implants, crowns, bridges, retainers
- Orthodontic Tip – For braces
- Pik Pocket Tip – For periodontal pockets and furcations
- Tongue Cleaner – For fresher breath

**Main Parameters:**

- Model: SK-CYQ-D
- Battery: 1100 mAh / 3.7V
- Rated Voltage/Power: 5V / 8W
- Waterproof Rating: IPX7
- Charging Time: approx. 2–3 hours
- Usage Time: approx. 70 minutes
- Modes: Pulse / Soft / Standard / Strong
- Water Tank Capacity: 300ml
- Product Weight: 260g ± 5g

- Product Dimensions: 69 × 76 × 215 mm
- 

### 3. Getting Started

#### Charging:

- Ensure both the device and your hands are dry.
- Open the top dust cover to release internal air.
- Open the silicone dust plug and insert the Type-C charging cable. Connect to a power adapter (not included).
- A full charge takes approximately 2–3 hours and lasts about 70 minutes (in soft mode).
- The indicator light turns green when fully charged.

#### Inserting and Removing the Nozzle:

- Remove the nozzle from the packaging.
- Insert into the top of the device until it clicks into place.
- To remove: press the nozzle release button and pull it out.
- Travel-friendly feature: the nozzle can be stored in the reservoir.  
⚠ **CAUTION:** Do not press the eject button while the unit is running.

#### Filling the Reservoir:

- Open the reservoir door and hold the device upright. Fill with water.

#### Note:

- Do not add toothpaste, salt, bleach, or insoluble substances.
- Mouthwash may be used. After use, rinse the unit by filling with warm water and running it until empty.

#### Operation:

- Tap the power button to start/stop. A 3-second soft-start function is enabled.
- Use the mode button to switch pressure levels.  
Begin with soft mode and increase as desired:
  - **Pulse Mode:** Alternating pressure, good for beginners.
  - **Soft Mode:** Gentle, ideal for sensitive gums.
  - **Standard Mode:** Routine cleaning of food debris.
  - **Strong Mode:** Removes tough stains and plaque.

#### **Recommended Technique:**

- Lean over the sink, place nozzle in mouth, and aim at gumline.
- Slightly close lips to prevent splashing, allowing water to flow into sink.
- Start with back teeth and move to the front. Glide along the gumline and pause briefly between teeth.
- Keep the device upright during use.
- Turn off the device after use and empty any remaining water.

#### **Note:**

- Mild gum bleeding may occur initially and usually improves within 1–2 weeks.
- Do not press the nozzle forcefully against gums or teeth.

---

## **4. Cleaning and Maintenance**

- After each use, turn off the device and empty the reservoir.
- To disassemble the water tank:
  - Hold the body with one hand and the tank with the other.
  - Rotate counter-clockwise and pull down to remove.
- Nozzle tips can be stored in the tank.

- After use, remove the nozzle and place it back in the tank.

**Warranty Card:**

Thank you for purchasing our water flosser. Please keep this card in a safe place.

1. This product includes a one-year warranty.
2. To make a warranty claim, the customer must provide the original purchase receipt as proof of the purchase date and, if requested, return the complete product.
3. The warranty does not cover the following situations:
  - Products purchased from unauthorized online retailers
  - Damage or malfunction caused by unauthorized disassembly
  - Damage or malfunction caused by dropping
  - Malfunction resulting from improper use
  - Repairs performed by unauthorized service providers